

# CHC Navigation Ltd


---

CGO2 Work Flow – Sync With Controller

Step1: Create one new project

Please refer to [CGO2 Work Flow - Projects](#)

# Step2: Open Sync Interface

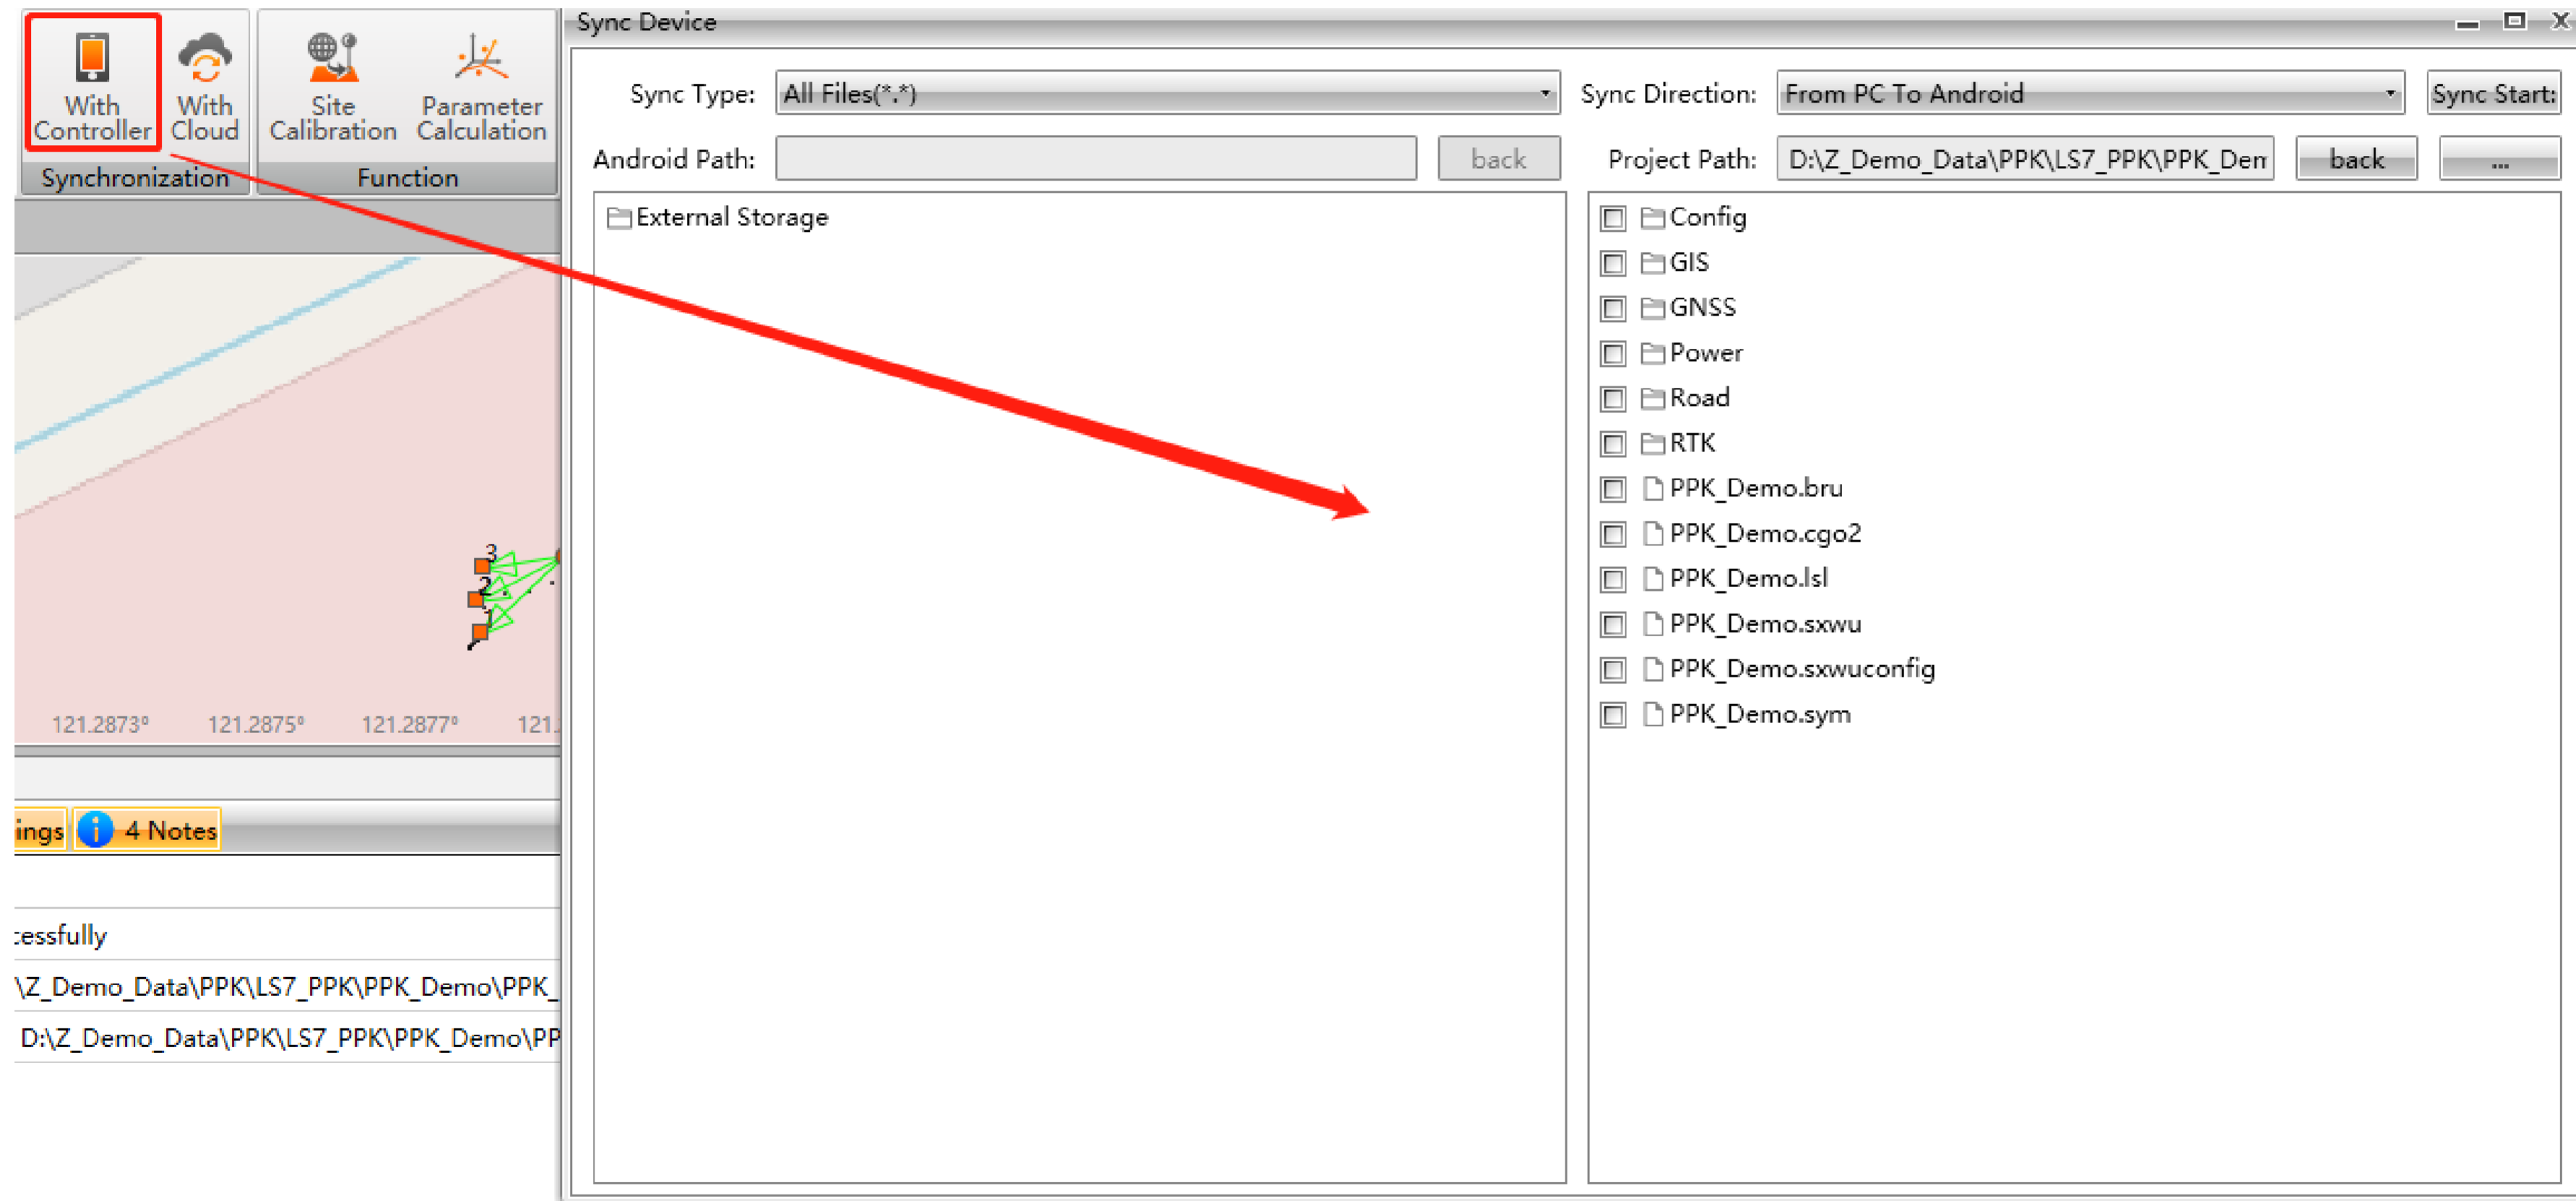


## 第3步：配置同步参数


1、选择同步文件类型

2、选择同步方向

3、选择本地存放路径

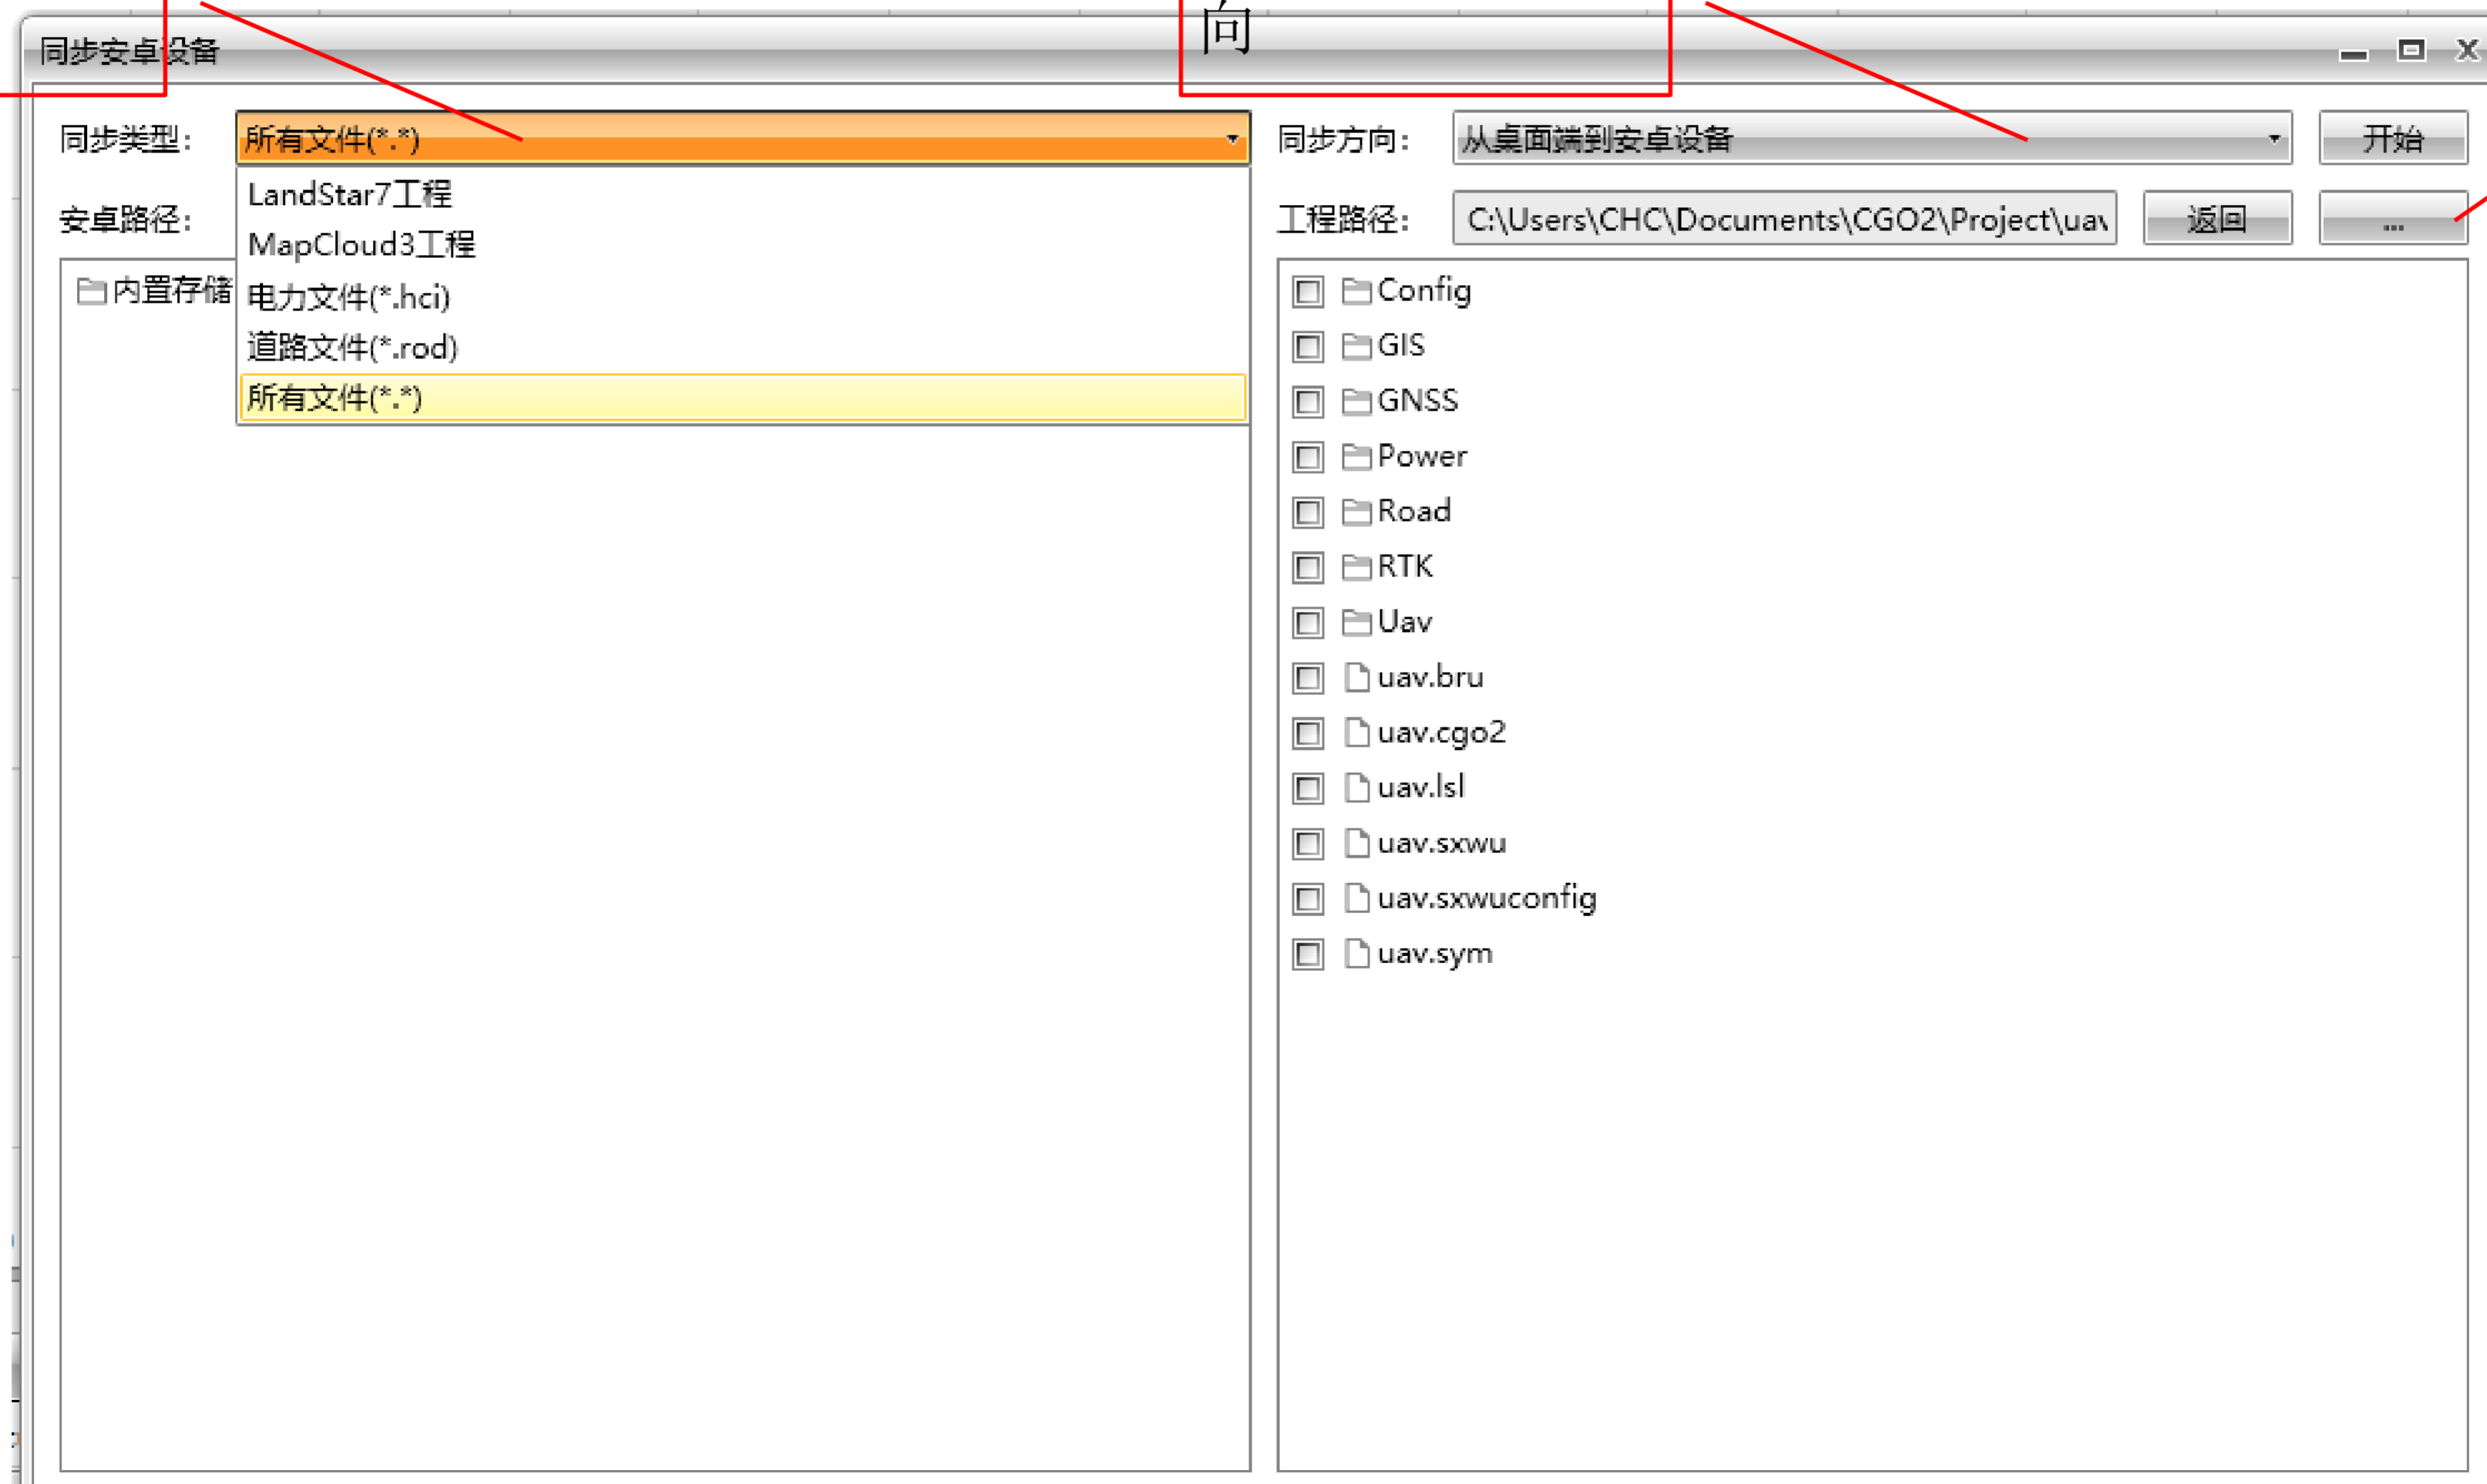

## Step4: Sync

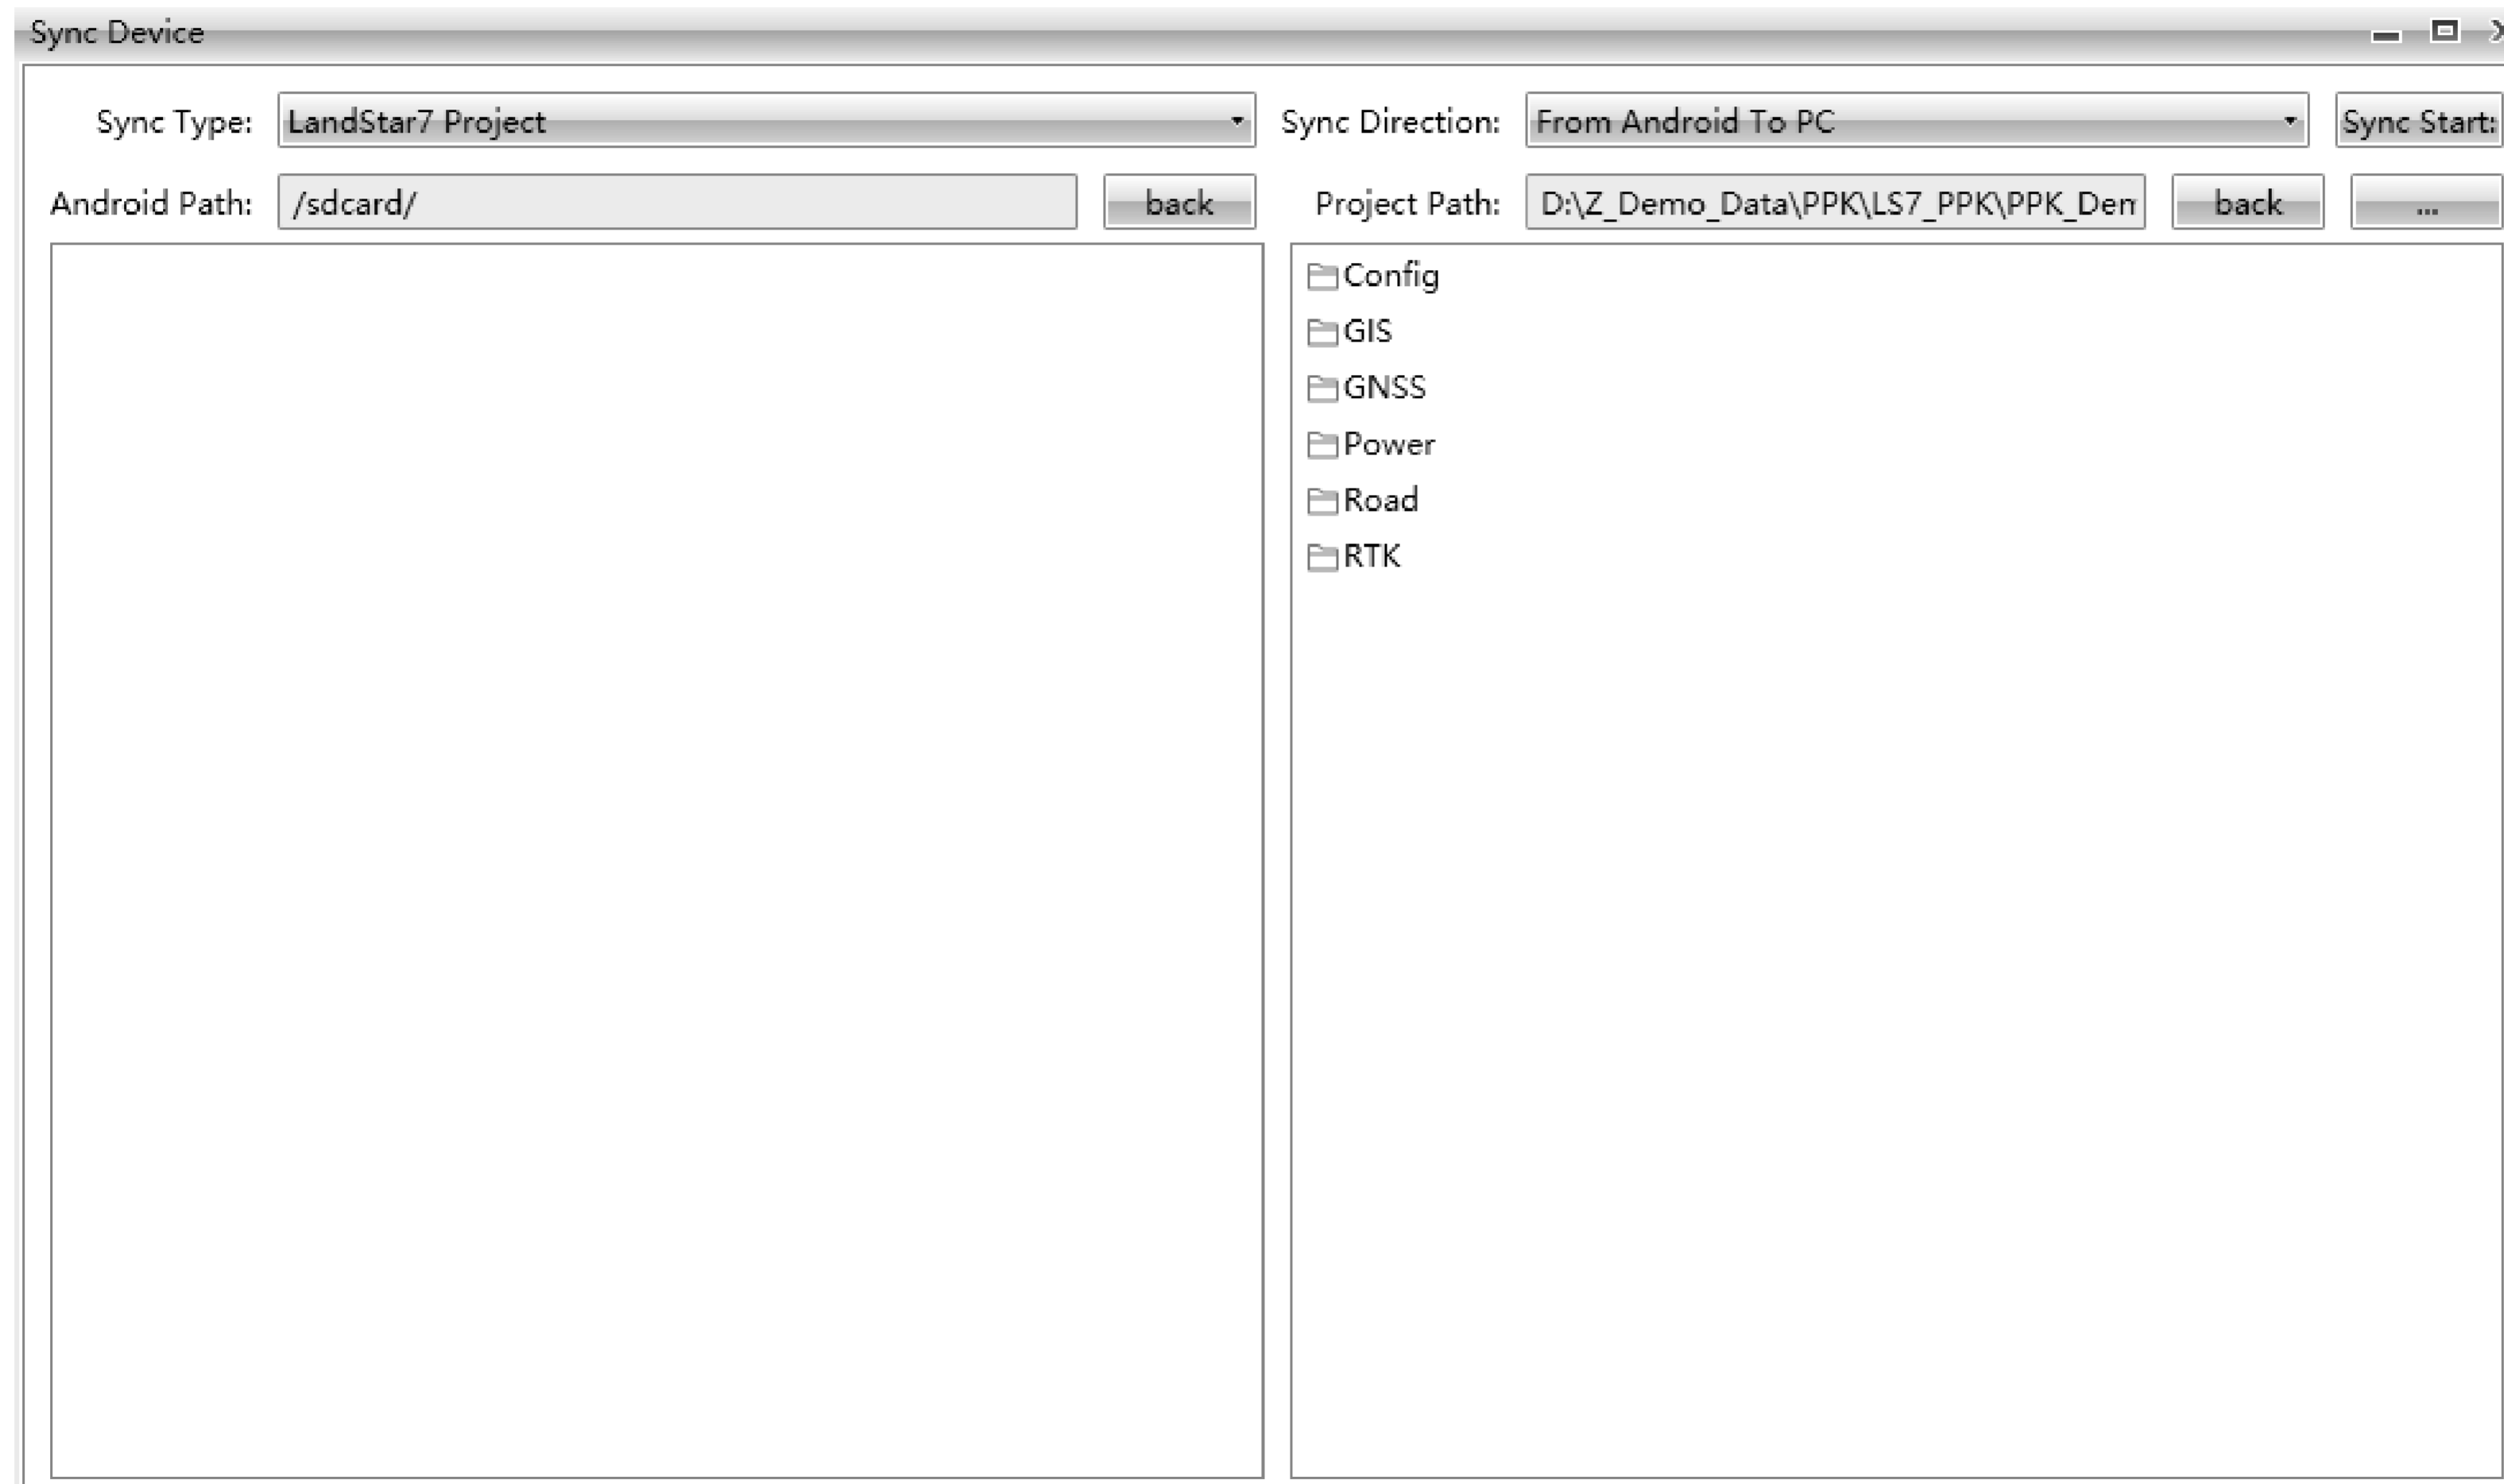

Please note:

Before Sync, please make sure the controller is connected with the PC, and open the USB Debugging function.

In the United States, contact

iGage Mapping Corporation  
+1-801-412-0011

[www.igage.com/cgo2](http://www.igage.com/cgo2)

For demos, pricing and additional information.

30-day fully functional demos are available by software code.

# THANK YOU

---

CHCNAV

Make your work more efficient